

3 Easy Steps

A retrofit kit from Fluorolite exemplifies both simplicity and function. The sturdy steel frame is installed onto a standard drop ceiling system, with the fixture in its original position, but now on top of the retrofit kit frame you have the opportunity to install any lens of your choice in the new swinging door frame.

The door is supported by integral pin hinges and is fastened with cam latches. The majority of louvers as well as prismatic sheets can easily fit the door frame.

A retrofit kit is an easy choice for areas that contain missing, damaged and mismatched luminaire door frames.

Sizes

2' x 4' = 23-3/4" x 47-3/4" x 3/4"

2' x 2' = 23-3/4" x 23-3/4" x 3/4"

1' x 4' = 11-3/4" x 47-3/4" x 3/4"

Colors


Powder coated White

1




Place the fixture on top of kit frame.

2

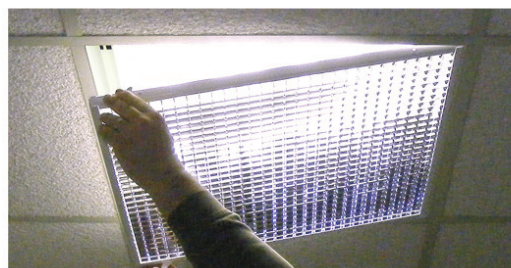

Hang swinging door to kit frame

3

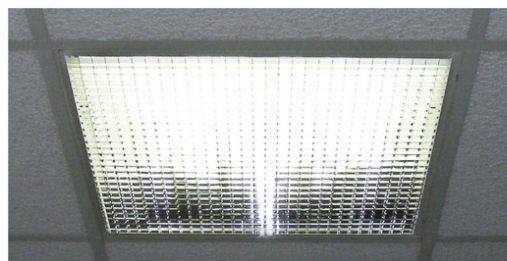

Latch door to frame and ENJOY!

